

# REZON

## 取扱説明書

18M8X1

81H


仕 様

- ①ゲーム名称 ..... REZON  
 ②PC BOARDサイズ ..... 280(W) × 230(D) × 20(H) [mm]  
 ③PC BOARD供給電圧 ... DC+5V 1.5A / DC+12V 1A

(注) 供給電圧は、PC BOARDのコネクター端子部で設定して下さい。

# 基板レイアウト図

< 部品面 >

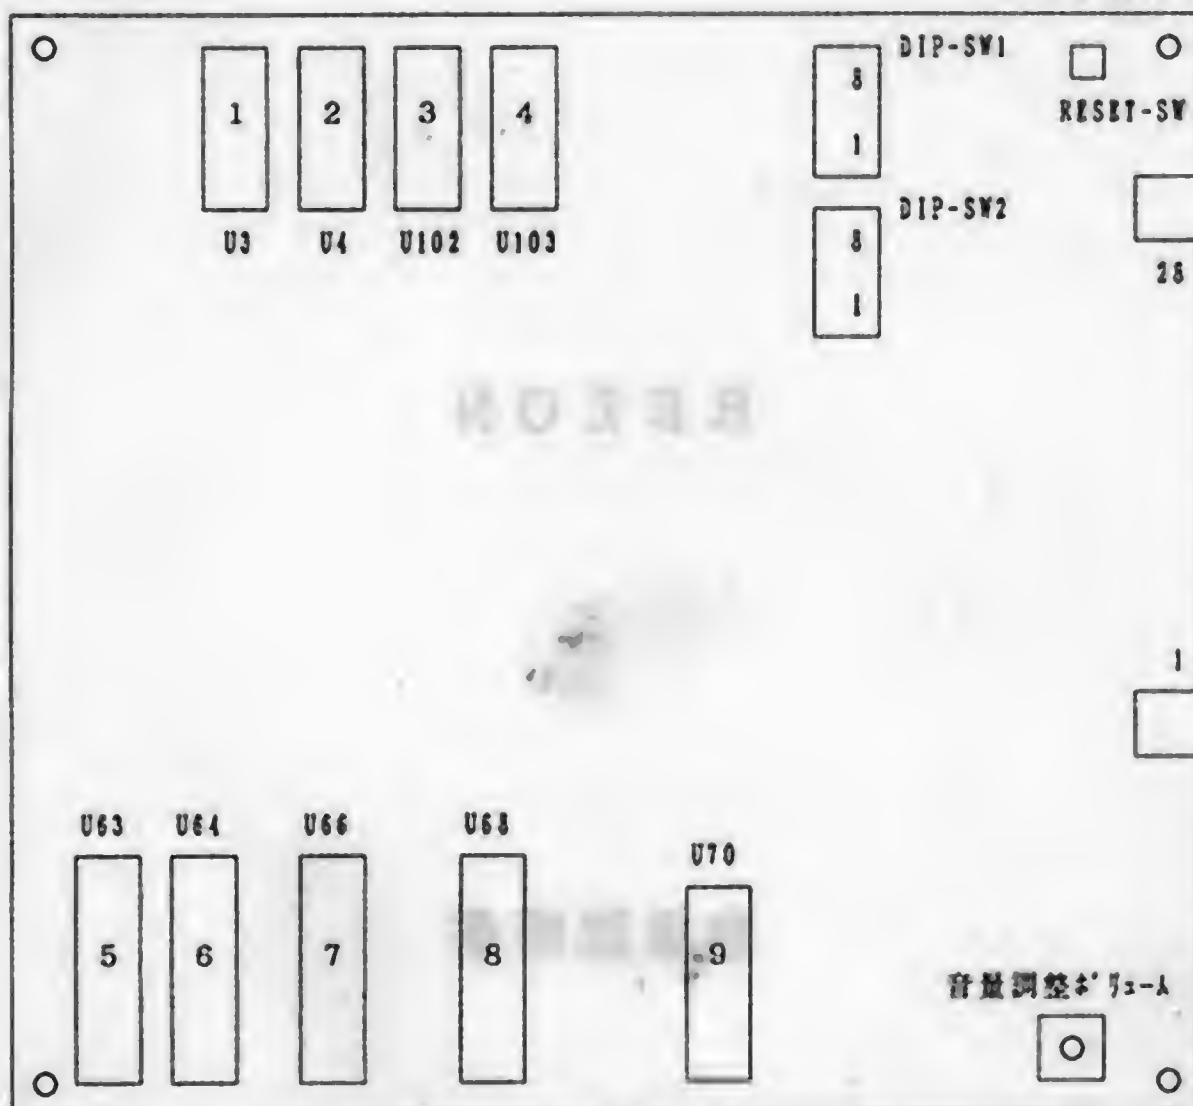

ROM対応表

NO	ROM番号	内 容	容 量	ROMタイプ	IC番号
1	US-001-001	プログラム	1M	EP-ROM	U3
2	US-001-002	プログラム	1M	EP-ROM	U4
3	US-001-003	プログラム	1M	EP-ROM	U102
4	US-001-004	プログラム	1M	EP-ROM	U103
5	US-001-005	キャラジェネ	4M	MASK-ROM	U63
6	US-001-006	キャラジェネ	4M	MASK-ROM	U64
7	US-001-007	キャラジェネ	2M	MASK-ROM	U66
8	US-001-008	キャラジェネ	2M	MASK-ROM	U68
9	US-001-009	サウンド	8M	MASK-ROM	U70

## DIP SW 1

FACTORY SET

項 目	内 容	1	2	3	4	5	6	7	8
プレイヤー数	3	OFF	OFF						
	2	ON	OFF						
	4	OFF	ON						
	5	ON	ON						
ゲームレベル	Normal			OFF	OFF				
	Easy			ON	OFF				
	Hard			OFF	ON				
	Very Hard			ON	ON				
プレイ料金	1317'レ					OFF	OFF	OFF	OFF
	2317'レ					ON	OFF	OFF	OFF
	3317'レ					OFF	ON	OFF	OFF
	4317'レ					ON	ON	OFF	OFF
	5317'レ					OFF	OFF	ON	OFF
	6317'レ					ON	OFF	ON	OFF
	1317'レ					OFF	ON	ON	OFF
	1317'レ					ON	ON	ON	OFF
	1317'レ					OFF	OFF	OFF	ON
	1317'レ					ON	OFF	OFF	ON
	1317'レ					OFF	ON	OFF	ON
	2317'レ					ON	ON	OFF	ON
	3317'レ					OFF	OFF	ON	ON
	5317'レ					ON	OFF	ON	ON
	8317'レ					OFF	ON	ON	ON
	79-7'レ					ON	ON	ON	ON

## DIP SW 2

項 目	内 容	1	2	3	4	5	6	7	8
画面反転	通常	OFF							
	反 転	ON							
デモ効果音	有 り		OFF						
	無 し		ON						
未 使 用				OFF					
				ON					
ゲームスタイル	797'ライト2P				OFF	OFF			
	797'ライト1P				ON	OFF			
	7-7'レ				OFF	ON			
未 使 用							OFF		
							ON		
未 使 用								OFF	
								ON	
テストモード	通常ゲーム								OFF
	テストモード								ON

## コネクター端子図

## J A M M A 規格

半 田 面	端子番号		部 品 面
G N D	A	1	G N D
G N D	B	2	G N D
+ 5 V	C	3	+ 5 V
+ 5 V	D	4	+ 5 V
未使用	E	5	未使用
+ 1 2 V	F	6	+ 1 2 V
誤挿入防止キー	H	7	誤挿入防止キー
コインカウンター 2	J	8	コインカウンター 1
コインロックアウト 2	K	9	コインロックアウト 1
スピーカー出力 (-)	L	1 0	スピーカー出力 (+)
未使用	M	1 1	未使用
ビデオ出力 緑	N	1 2	ビデオ出力 赤
ビデオ出力 同期信号	P	1 3	ビデオ出力 青
サービス スイッチ	R	1 4	ビデオ G N D
チルト スイッチ	S	1 5	未使用
コイン スイッチ 2	T	1 6	コイン スイッチ 1
スタート スイッチ 2	U	1 7	スタート スイッチ 1
2 P アップ	V	1 8	1 P アップ
2 P ダウン	W	1 9	1 P ダウン
2 P レフト	X	2 0	1 P レフト
2 P ライト	Y	2 1	1 P ライト
2 P ショット	Z	2 2	1 P ショット
未使用	a	2 3	未使用
未使用	b	2 4	未使用
未使用	c	2 5	未使用
未使用	d	2 6	未使用
G N D	e	2 7	G N D
G N D	f	2 8	G N D